



MONITORING AND CONTROL SOLUTIONS

Installing temperature sensors in pharmacy fridges

STEP 1:

Insert the temperature probe into the compression gland



STEP 2:

Remove the black cap from the glycol bottle and insert the probe into the Bottle.

Tighten the white cap, as well as the compression gland




STEP 3:

Place the bottle on a rack in the fridge



STEP 4:

Use the provided clips to secure the sensor cable to the side of the fridge

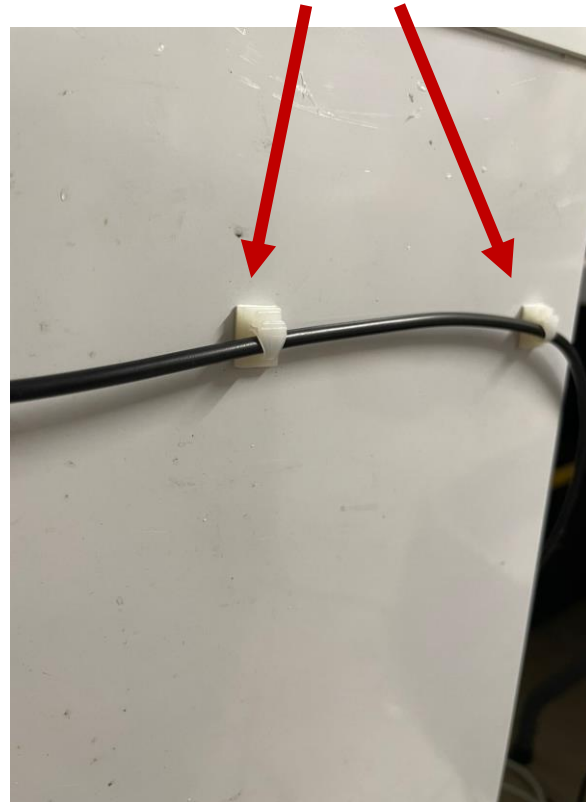

STEP 5:

Secure the logger on the side or back of the fridge or freezer using double-sided tape

